



## Display and operating units

## AZL66...

---

**AZL66 display and operating units are used in connection with the LMV6 burner management system directly on the burner or in control cabinets within the burner's immediate vicinity.**

- **AZL66 units are used for the display, operation, and parameterization of specific safety-related and non-safety-related burner functions.**
- **Key plant data and fault codes can be queried and displayed.**
- **Communication between the AZL66 and the LMV6 takes place via the CAN interface.**

**The AZL66 and this data sheet are intended for original equipment manufacturers (OEMs) using the AZL66 in or on their products.**

The description that follows reflects the maximum functional scope of the AZL66. The actual functions and the principle of operation are to be determined based on the LMV6.

- Housing in a modern design featuring recycled plastic
- Flame-retardant housing material
- Display of operating states, program phases, and fault codes
- Setting of parameters and ratio control curves
- Separate unit for front-panel installation
- With 4.3" TFT display
- With push-turn controller as central setting element
- With 2 additional buttons
- Many languages possible
- With USB port
- With LED to visualize the status of the burner
- Back-lit LCD (support dependent on LMV6)
- Fault display via an LED
- Backup function
- Housing designed for panel cut-out mounting (IP54 degree of protection when installed)

### Supplementary documentation

---

Product type	Type of documentation	Documentation number
AZL66	Environmental Declaration	E7562 *)
	User Manual	U7562
LMV6	Environmental Declaration	E7560 *)
	Data Sheet	N7560
	Parameter list and error code list	I7560
	Installation guide	J7560
	Basic Documentation	P7560

\*) On request only

### Warning notes

---



**You will find additional safety instructions in the corresponding documentation for the LMV6.**

**To avoid personal injury or damage to property or the environment, the following warning notes must be observed.**

- AZL66 units may only be used in building services plant and only in compliance with the applications described in this document.
- Compliance with all requirements described in the following chapters is a mandatory condition for using the AZL66.
- Local safety regulations (installation, etc.) must be complied with.
- It is not permitted to open AZL66 units. The warranty obligation shall become void if this requirement is violated.



---

### Caution

It is not permitted to open, interfere with, or modify the AZL66.

- All activities (mounting, installation, service work, etc.) must be performed by qualified staff
- Before carrying out any wiring changes in the connection area, isolate the plant from the power supply (all-pole disconnection). Ensure that the plant cannot be inadvertently switched on again and that it is indeed dead. Failure to observe this information poses a risk of electric shock
- Take suitable measures to provide protection against accidental contact at the electrical connections. Failure to observe this information poses a risk of electric shock
- On completion of every task (mounting, installation, service work, shutdown, etc.) always check that the CAN interface is wired and connected correctly (RAST3.81 jack) in the AZL66 housing and that the parameter settings have been made correctly. Failure to observe this information poses a risk of damaging the safety functions and a risk of electric shock
- These AZL66 units must not be put into operation following impact or shock; even if they do not exhibit any visible damage, their safety functions may be impaired. Failure to observe this information poses a risk of damaging the safety functions and a risk of electric shock
- The burner or boiler manufacturer must ensure degree of protection IP40 / IP54 for the LMV6 and AZL66 as per EN 60529. Failure to observe this information poses a risk of damaging the safety functions and a risk of electric shock

---

**Siemens does not assume responsibility for damage resulting from unauthorized interventions.**

### **Electromagnetic emissions must be checked on an application-specific basis!**

Qualified personnel

Only **qualified personnel** are allowed to start up and operate the AZL66. Qualified personnel in the context of the safety-related notes contained in this data sheet are persons who are authorized to commission, ground, and tag units, systems, and electrical circuits in compliance with established safety practices and standards.

Correct use

*Note the following:*

The AZL66 may only be used for the applications described in the technical documentation and only in connection with Siemens burner management systems.

The AZL66 can only function correctly and safely if shipped, stored, set up, and installed correctly, and operated and maintained with care.


## Mounting notes

- Ensure that the relevant national safety regulations and notes on standards are complied with
- Please note that the mounting surface must be completely flat
- The AZL66 must be used in a dry and clean environment
- Note the tightening torque of 0.5 Nm; this is a condition for compliance with IP54
- Note that the AZL66 must be installed within sight of the burner

### Panel cut-out mounting of the AZL66

#### Step 1

Position the AZL66 in the correct place inside the designated opening (do not apply excess pressure).

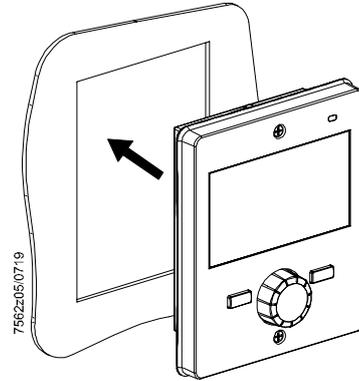


#### Step 2

Next, screw the AZL66 tight with the countersunk cross-head screws in the housing (do not apply excess pressure).




**Note!**  
If the AZL66 does not fit inside the designated opening, check the cut-out and the housing.

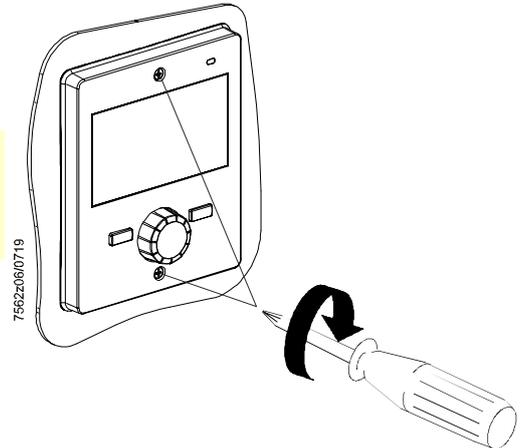


### Cut-out dimensions for the AZL66

The AZL66 units are manufactured with installation dimensions of 90.1 x 125.7 mm  $\pm 0.5$ . The dimensions of the front panel result in a grid dimension of 90.5 mm. The mounting mechanisms enable the AZL66 units to be installed in front panels of various thicknesses (1–3 mm).

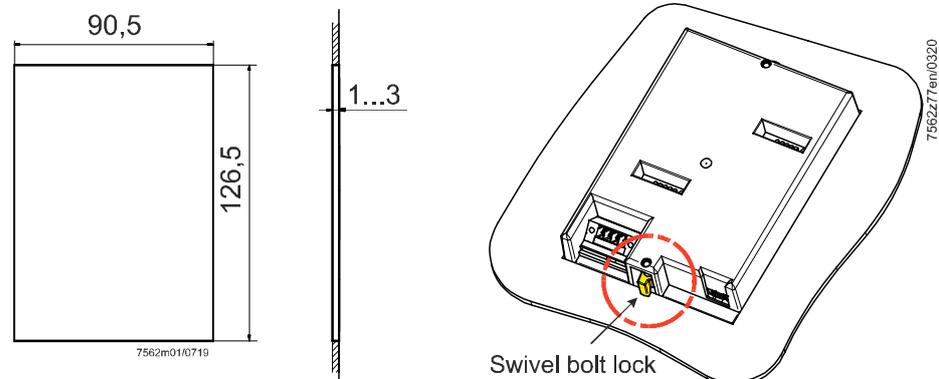

- Please note that the mounting surface must be completely flat
- The M4 screws with O-rings (such as those similar to 10-UNF) are equipped with a swivel bolt lock and are included in the scope of delivery of the AZL66

The operating philosophy and display philosophy can be found in the relevant user manuals for the LMV6. All unit versions of the AZL66 function and are operated in the same way.

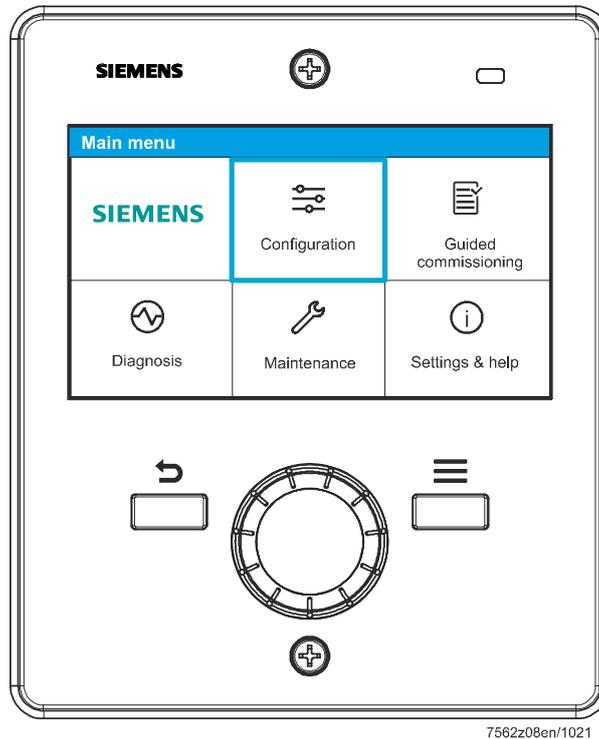

7562z08en/1021

Graphics	Function	Function
None	Rotary knob TURN	<ul style="list-style-type: none"> <li>• Navigate through tile views or list views</li> <li>• Can be turned clockwise to the right or down</li> <li>• Can be turned counterclockwise to the left or up</li> <li>• Change parameter values</li> </ul>
None	Rotary knob ENTER	<ul style="list-style-type: none"> <li>• Select a tile / menu item</li> <li>• Confirm a change to a parameter value</li> <li>• Acknowledge messages</li> </ul>
	Back (Return)	Exit a tile / menu item / value adjuster without making further changes
	Menu	<ul style="list-style-type: none"> <li>• Jump to the top level of the menu tree (possible from anywhere)</li> <li>• Access to additional functions (if available)</li> </ul>

## Meaning of symbols on the display

Main menu		
<b>SIEMENS</b>	 Configuration	 Guided commissioning
 Diagnosis	 Maintenance	 Settings & help

7562x45en1121

Tile	Meaning
 Configuration	<ul style="list-style-type: none"> <li>• Changing the parameters</li> <li>• Entering burner-specific parameters</li> </ul> <p>Adaptation of programs and/or components/accessories to the LMV6 and adaptation of the LMV6 to its components/accessories.</p>
 Guided commissioning	<p>Central repository of all relevant parameters for commissioning</p>
 Diagnosis	<ul style="list-style-type: none"> <li>• Storage of all process data</li> <li>• Storage of the error history</li> <li>• Burner identification</li> </ul>
 Maintenance	<ul style="list-style-type: none"> <li>• Backup and restore</li> <li>• Hours run counter</li> <li>• Startup counter</li> <li>• Statistics and details for all system components</li> </ul>
 Settings & help	<ul style="list-style-type: none"> <li>• Entering the password</li> <li>• Changing the language (default: English)</li> <li>• Modbus</li> <li>• Date and time</li> <li>• Display settings</li> </ul>

- AGG6.635 signal cable from the LMV6 to the AZL66. The AGG6.635 signal cable is specified for use under the burner hood. If other signal cables are used, there is no guarantee that the required cable features will be available.
- Lay the AGG6.635 signal cable from the LMV6 to the AZL66 separately from other cables.
- Both the AGG6.635 signal cable and the AZL66 must be shipped and stored so that no damage due to dust and water can occur during subsequent use in the plant.
- Prior to switching on the mains voltage, make certain that the AGG6.635 signal cable has been connected to the AZL66 correctly.
- The AZL66 must be used in a dry and clean environment.
- The electrical power supply must be disconnected prior to installation.
- The requirements of protection class III must be observed for the wiring.
- Static charges must be avoided since they can damage the electronic components of the AZL66 on contact.

**Recommendation:** Use ESD equipment!



### Caution

- EN 60335-2-102 and EN 60730-2-5 must be complied with
- Ensure that the electrical wiring inside the boiler complies with national and local regulations.
- The burner or boiler manufacturer must ensure degree of protection IP40 / IP54 for the LMV6 and AZL66 as per EN 60529:1991 + A1:2000 + A2:2013. Failure to observe this information poses a risk of damaging the safety functions and a risk of electric shock

## Commissioning notes

---

Prerequisites                      The burner or boiler manufacturer is responsible for parameterizing the LMV6 correctly; this involves compliance with the relevant standards and guidelines.

## Standards and certificates

---



Note!  
Only in connection with the LMV6!



ISO 9001:2015  
ISO 14001:2015  
OHSAS 18001:2007



China RoHS  
Hazardous substances table:  
<http://www.siemens.com/download?A6V10883536>

## Disposal notes

---

The AZL66 contains electrical and electronic components and must not be disposed of together with domestic waste. Local and currently valid legislation must be complied with.

## Open Source Software (OSS) declaration

---

Due to the license terms of the software we use, Siemens AG wishes to note that the OEM is obligated to provide the following license text for the end user in the documentation:

### Open Source Software (OSS) declaration

Embedded in – or bundled with – the AZL66 are open source software (OSS) components and other third-party components identified below.

You may obtain, distribute, and/or modify one copy of the open-source code for the OSS component under the terms of their respective licenses, which are the GNU General Public License, the GNU Lesser General Public License, the Modified BSD License, and the MIT License.

In the event of conflicts between Siemens license conditions and the open source software license conditions, the open source software conditions shall prevail with respect to the open source software portions of the software.

You are permitted to modify proprietary components originating from Siemens and make changes as part of a reverse engineering process for debugging purposes, to the extent that these are linked to libraries licensed under the GNU Lesser General Public License.

You are not permitted to distribute information resulting from this reverse engineering process of the modified proprietary components. Your rights to modify proprietary components originating from parties other than Siemens are governed to the respective third-party license conditions.

On written request within three years from the date of product purchase and against payment of our expenses, Siemens will supply the source code for any OSS component identified below in line with the terms of the applicable license.

Please contact us in this regard at:

Siemens AG  
Otto-Hahn-Ring 6  
81739 Munich  
Germany  
Keyword: Open Source Request

The warranty obligations of SIEMENS are defined in your contract with SIEMENS. SIEMENS provides no warranty or technical support for this product or any OSS components contained therein if they are modified or used in a manner not specified by SIEMENS. The license terms below may contain disclaimers that apply between you and the respective licensor. In the event of any ambiguity, SIEMENS makes no warranty representation on behalf of or binding on third party licensor.

All open source software components used within the product (including their copyright holders and the license conditions) can be found on the website at <http://www.siemens.com/download?A6V11985972>

## Type summary

Type	AZL66.00A8	AZL66.10A8
Article no.	S55629-H301-A100	S55629-H302-A100

### Functions

Real-time clock with power reserve (e.g., to record the time at which faults occur)	●	●
Graphic display 4.3" TFT with 480 x 272 pixels	●	●
Parameter-setting functions and display functions	●	●
Saving of fault histories and error histories	●	●
13 languages pre-installed	●	●
Reset	●	●
Burner rapid shutdown using button combinations	●	●
3 access levels, 2 of which have password protection	●	●
Parameter backup and restore functions	●	●

### Communication interfaces

USB port • For operation with ACS460 PC software	●	●
WLAN interface: • For wireless PC operation with ACS460 PC software • For connection to smartphones or tablets for service and diagnostics	---	●

Article no.	Type (ASN)	Language
S55629-H301-A100	AZL66.00A8	German, English, Italian, Spanish, French, Finnish, Hungarian, Dutch, Portuguese, Russian, Turkish, Korean, Chinese
S55629-H302-A100	AZL66.10A8	German, English, Italian, Spanish, French, Finnish, Hungarian, Dutch, Portuguese, Russian, Turkish, Korean, Chinese

#### Note

RAST3.81 connector!

The required RAST3.81 connector for connecting the signal cable does not constitute part of the AZL66.



The connector can be purchased individually or as a component of the following products:

- AGG9.421: RAST3.81 single connector (black)
- AGG6.635: pre-fitted signal cable from LMV6 to AZL66
- AGG6.710: Single connector set for LMV60
- AGG6.720: Single connector set for LMV62/LMV63

## Technical data

General unit data	Supply voltage	24 V DC -15% / +10%
	Power consumption	< 5 W, typically
	Degree of protection	According to EN 60529:1991 + A1:2000 + A2:2013
	• Rear	IP00
	• Front	IP40 / IP54 when installed
	Protection class	III in accordance with EN 60730-1:2016
	Housing	
	• Material	PC and PC / ABS
	• Color	RAL 7035 (light gray)
	Flammability rating	
	• Clear housing parts	According to UL94 V2 (PC)
	• Dyed housing parts	According to UL94 V0 (PC / ABS)
	Weight	Approx. 260 g
	Pollution degree	2
Tightening torque for fixing screws	Max. 0.5 Nm	
Cut-out dimensions	90.1 x 125.7 mm ±0.5	

### Note

RAST3.81 connector!

The required RAST3.81 connector for connecting the signal cable does not constitute part of the AZL66.




The connector can be purchased individually or as a component of the following products:

- AGG9.421: RAST3.81 single connector (black)
- AGG6.635: pre-fitted signal cable from LMV6 to AZL66
- AGG6.710: Single connector set for LMV60
- AGG6.720: Single connector set for LMV62/LMV63

AGG6.635 signal cable  
Display → BCI

<b>Signal cable</b>	White in color Shielded With RAST3.81 connector
Cable length	3 m
Place of installation	Under the burner hood (arrangements for SKII EN 60730-1 additionally required)

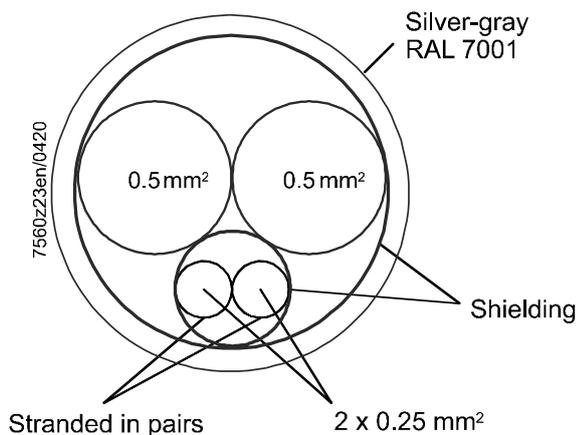


Connection	Color	Wire cross-section in mm <sup>2</sup>	AZL66 terminal
DC 24 V	White	0.5	1
CAN_H	Yellow	0.25	2
CAN_L	Green	0.25	3
GND	Brown	0.5	4

The permissible cable length is specified in the data sheet for the LMV6.

## Technical data (continued)

Connector strain relief	Recommendation:	KGG-MC 1.5/4 BK cable housing  Order number: 1735590  Supplier: PHOENIX CONTACT Deutschland GmbH
-------------------------	-----------------	--

Inputs/outputs	CAN interface with RAST3.81 jack	To Siemens LMV6 burner management system
	USB interface	USB 2.0 Micro-B

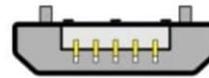

Environmental conditions	<b>Storage</b>	EN 60721-3-1:1997
	Climatic conditions	Class 1K3
	Mechanical conditions	Class 1M2
	Temperature range	-20 to +60°C
	Humidity	< 95% r.h.
	<b>Transport</b>	EN 60721-3-2:1997
	Climatic conditions	Class 2K3
	Mechanical conditions	Class 2M2
	Temperature range	-20 to +60°C
	Humidity	< 95% r.h.
	<b>Operation</b>	EN 60721-3-3:1995 + A2:1997
	Climatic conditions	Class 3K3
Mechanical conditions	Class 3M3	
Temperature range	-20 to +60°C	
Humidity	< 95% r.h.	
Installation altitude	Max. 2,000 m above sea level	




### Warning!


Condensation, formation of ice, and ingress of water are not permitted. Failure to observe this information poses a risk of damaging the safety functions and a risk of electric shock.

## Connection diagram

Example: Basic diagram of AZL66 with LMV6

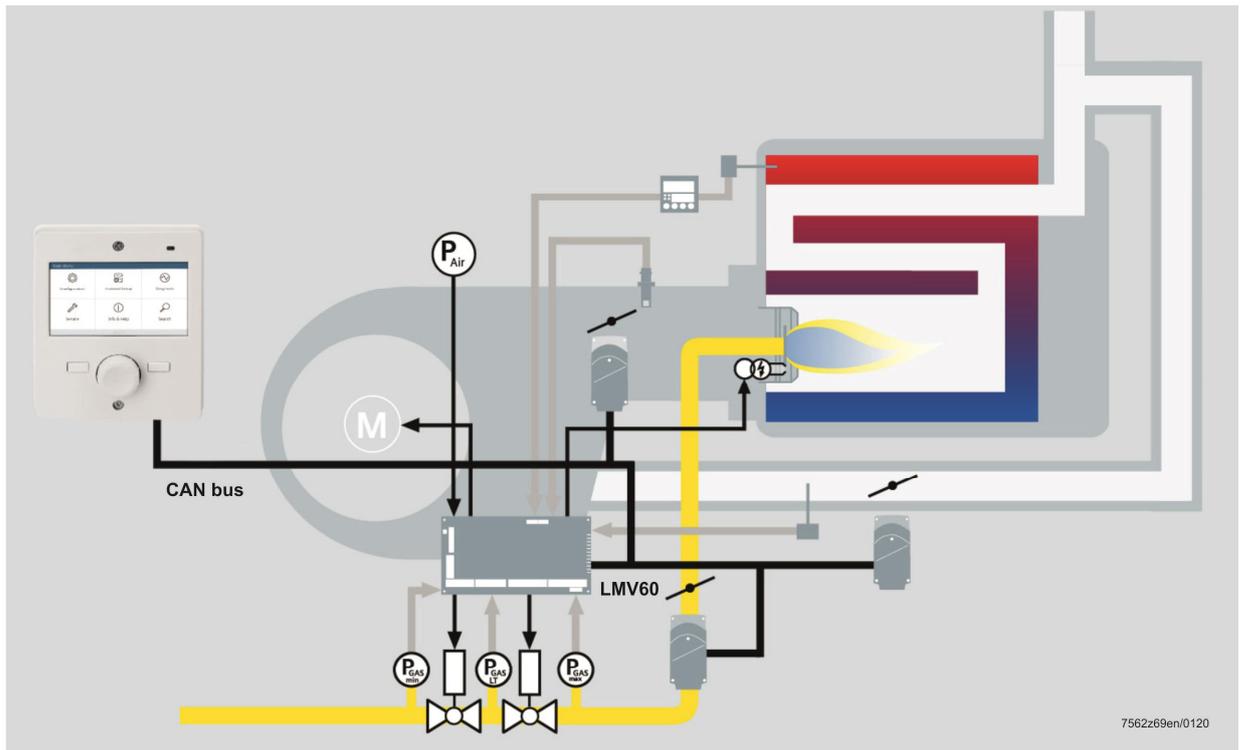


Connection, AZL66 to LMV6

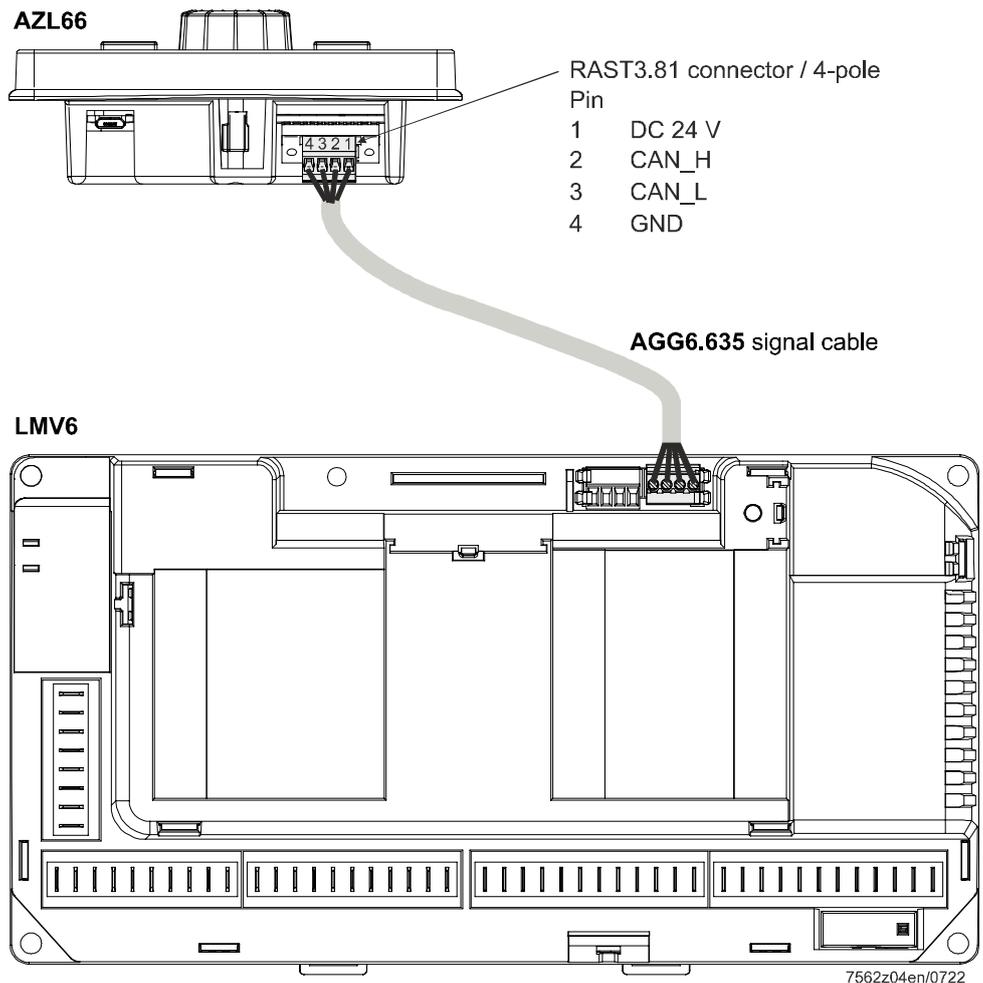

# Dimensions

Dimensions in mm

AZL66

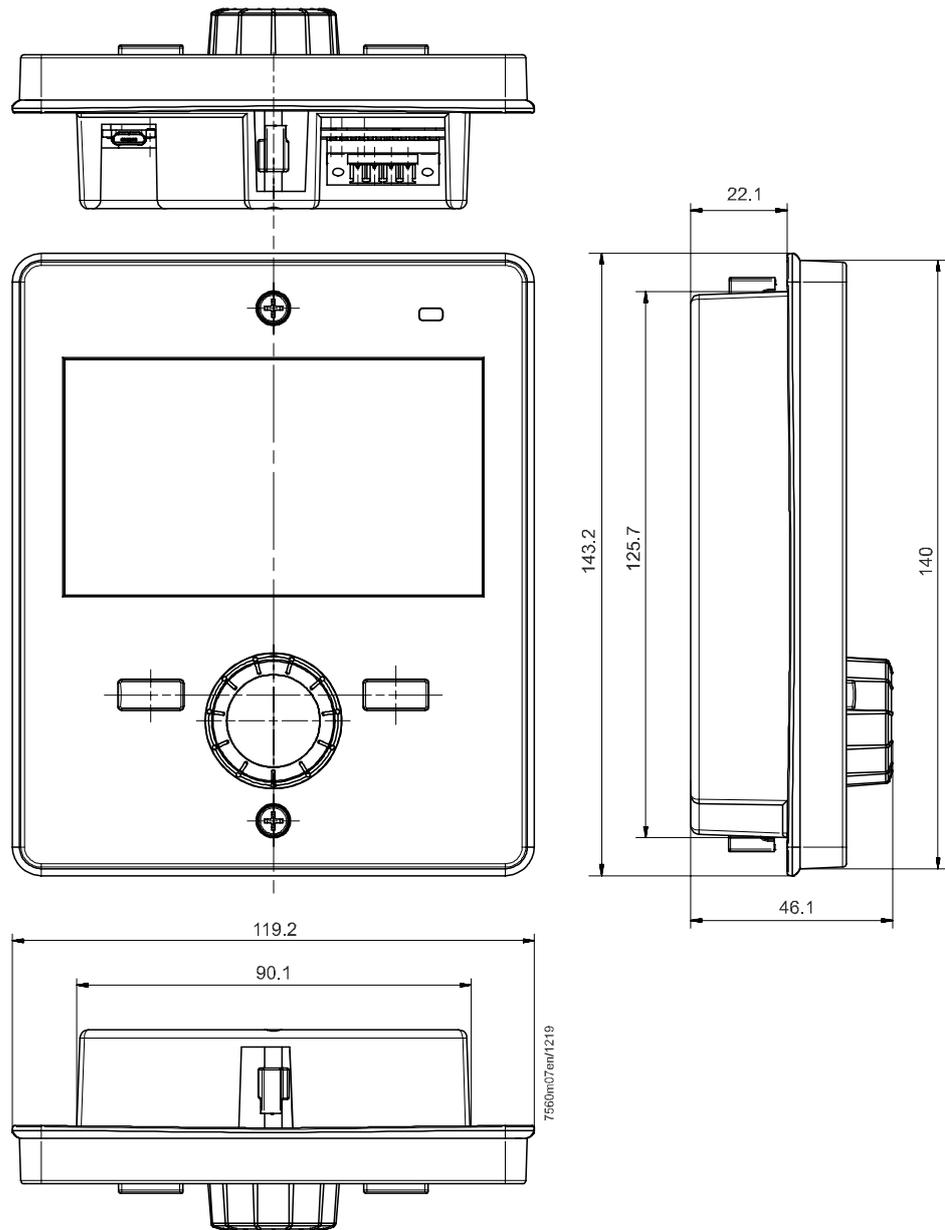

M1:2

